



DC3001

Wireless Intercom System

 


INSTRUCTION MANUAL

- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids, and heat sources away from the product to prevent mechanical damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, the impact of external force.
- Do not attempt to disassemble the product. Doing so voids the warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happen.
- Failure to follow all the instructions may result in mechanical damage.
- Warranty does not apply to human errors.

PRODUCT OVERVIEW

- ① 3.5mm Mic In Port
- ② Power On/Off Toggle
- ③ Indicator Light
- ④ Button A
- ⑤ Volume +
- ⑥ Button B
- ⑦ Volume -
- ⑧ Type-C Port

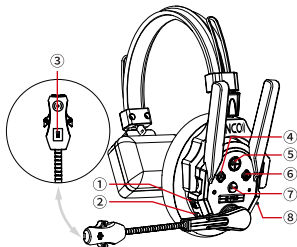


OPERATING INSTRUCTIONS

1. Power On/ Off

Power On: Push the power toggle switch upwards .

 Power Off: Push the power toggle switch downwards.

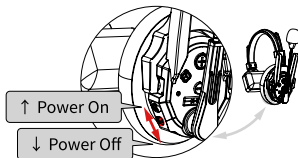

2. Pairing/Unpairing

*Products are pre-paired from the factory and ready to use.

*It supports group connections with up to 5 people.

 
Pairing

Long press the button A, release after hearing "Connecting and Pairing", and wait for the pairing to complete.

If pairing fails, please retry the process.




Once paired, users can talk directly to each other with no Master unit required.

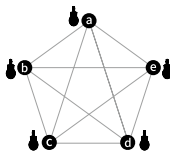


Unpairing

 Long press the button A, release after hearing "Unpairing".

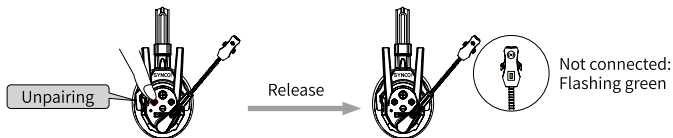

3. Volume Control

 Short press the + / - button to increase/decrease the volume (5 Levels).

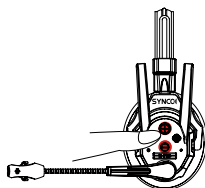

Volume Up/Volume Down: Beep

 


Max/Min. Volume: Max Volume/Min Volume

4. Noise Cancellation

Short press the button B to turn on/off the noise cancellation feature.

Noise Cancellation On:
Green Light Steady




Noise Cancellation Off:
Green & Orange Light Alternating

Noise
Cancellation On

Noise
Cancellation Off

5. Mute/Unmute

 Rotate the boom arm up/down to mute/unmute.

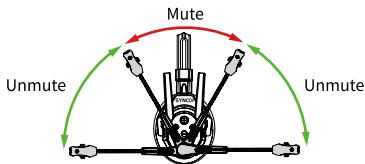


6. Dominant Mode (Push-to-Talk Mode)

Long press the button B to enter the PTT mode for muting other headsets.

Others are still available for listening, and only the headset that activates the PPT mode is available for speaking.

 
Release the button B to exit PTT mode.

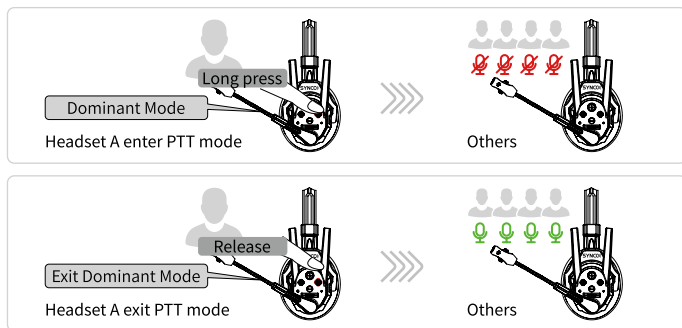

7. Real-Time Monitoring

Connect the device(Camera, Camcorder, etc.) with the Xtalk headset via 3.5mm TRS port for monitoring the audio from the device.

 * This port is only for monitoring and is not the output port.

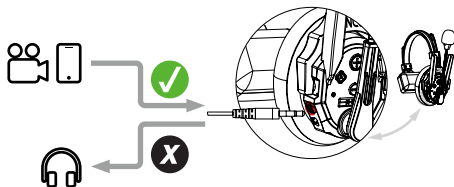


8. Powering

* Low battery (<20%): Voice prompt “Low battery” and the red light will flash.

Please replace the battery.

Push down the toggle of the battery case, then pull the case door outward to place/remove the battery.

 Slide the battery into the charging slot, then connect to power.

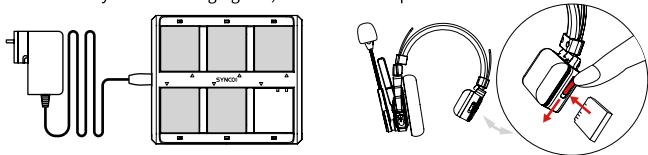

SPECIFICATIONS

Wireless Technology	Digital 2.4GHz
Transmission Mode	Full-Duplex
Operating Range	500m (LOS)
Frequency Band	2.4GHz
Latency	About 120ms
Approximate RF Sensitivity	<-90dBm
Radio Output Frequency	20dBm
Power	USB-C 5V
Battery Capacity	1050mAh Li-ion Battery
Working Time	15H
Charging Time	About 2.5H
Frequency Response	150Hz~7KHz
Signal-To-Noise Ratio	≥ 65dB
Distortion	<1 %
Microphone Type	Condenser Microphone
Max Input Sound Pressure Level	>115dBSPL
Output Sound Pressure Level	Typical 98+3dBSPL(at 94dBSPL 1KHz)
Weight	About 200g (Battery Included)
Temperature Range	0~+45° C(Working Status) -20~+60° C(Storage Condition)

BOX CONTENTS



Headset x2



Charging
Adapter x1



Carrying
Bag x2



Rechargeable
Battery x2



Foam
Cushion x 2



Microphone
Windshield x 2



Data Transfer
Cable x1

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555