

GT3779

1:10 SCALE RC JET SKI OPERATING INSTRUCTIONS



WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 14 years and over.
- Adult supervision is required during operation and charging.
- Do not touch the jet ski while in use as it may cause injury.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the jet ski.
- Do not use the jet ski if any component is damaged or loose.
- Keep the jet ski away from heat or excessive moisture.

Operation & Storage:

- Ensure the cover is placed on the jet ski before putting in water.
- Only use the jet ski in fresh water, using in salt or with chlorine will damage the jet ski.
- Do not submerge the jet ski completely in water.
- Switch off the jet ski and remote control when not in use.
- Securely close the battery compartment before use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.

Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.


- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the jet ski while it is charging.
- Do not cover the jet ski or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not crush, puncture, bend, open, short-circuit or incinerate the battery.
- Do not expose the battery to water or other liquids.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.



LI-PO BATTERY DISPOSAL AND RECYCLING
Waste lithium-polymer batteries must not be disposed of with household waste.
Please contact your local environmental authority or an approved recycling centre
for information on proper disposal and recycling.




PRODUCT DIAGRAM

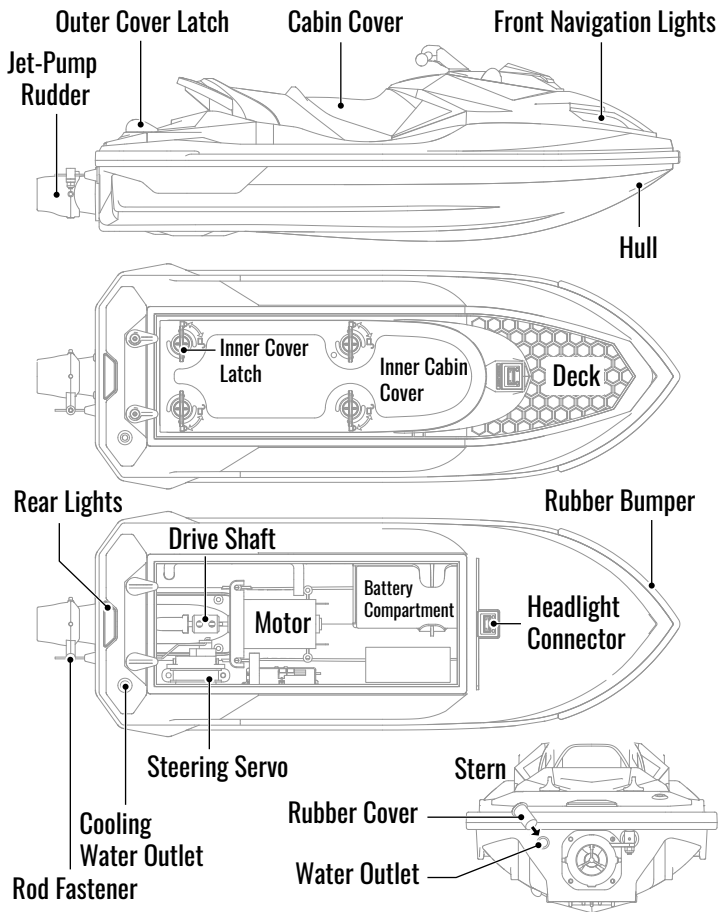

CHARGING THE BATTERY

1. Connect the charging case to the battery charging port, then connect the USB plug to a suitable USB power source.
2. The green indicator light will flash while charging and remain steadily lit when the battery is fully charged.
3. Remove the battery from the boat before charging. Place it in a cool, well-ventilated area during charging.



Battery Charging Port 

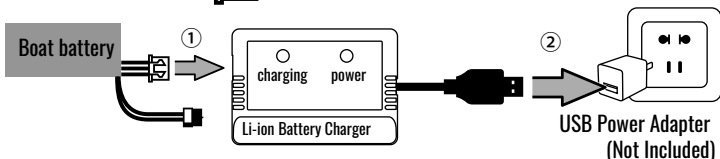


WARNING: ADULT SUPERVISION IS REQUIRED DURING CHARGING.
Ensure that the charging cable and connectors are properly connected before charging.

INSTALLING THE BOAT BATTERY



- 1) Turn the outer cover latches to the left or right to unlock them, then lift the cabin cover.

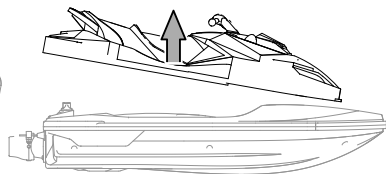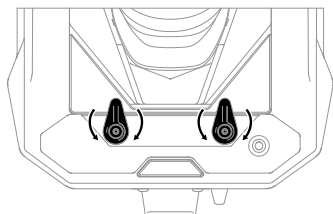

- 2) Follow the markings on the inner cover to unlock the latches, then lift and remove the inner cover.

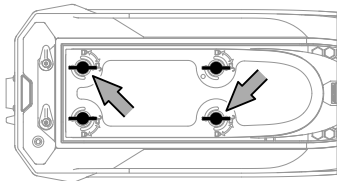


3) Place the boat battery securely in the battery compartment and connect the battery output connector to the hull input connector.

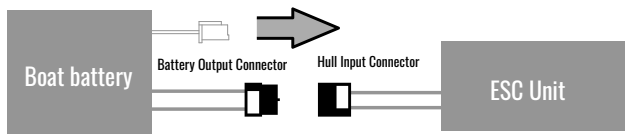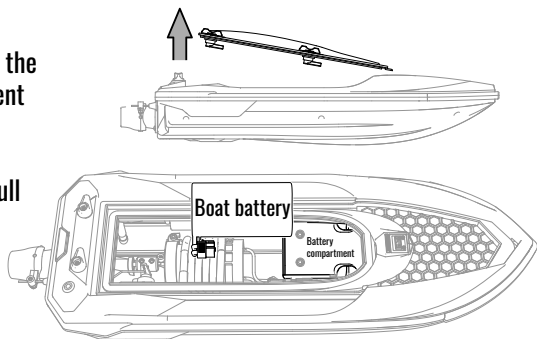


4) Replace the inner and outer covers, then lock them securely.

Notes:

- Keep the battery wires away from the rudder wheels to prevent them from becoming tangled or damaged.
- When operating several boats at the same time, pair each boat and transmitter separately to prevent interference or unintended operation.
- After use, position the boat with the bow facing downward before opening the cover. This helps prevent residual water from entering the cabin.

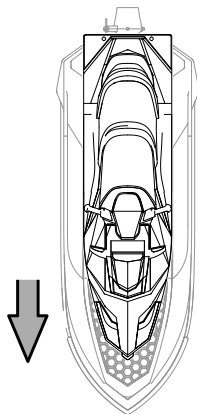

Transmitter Preparation

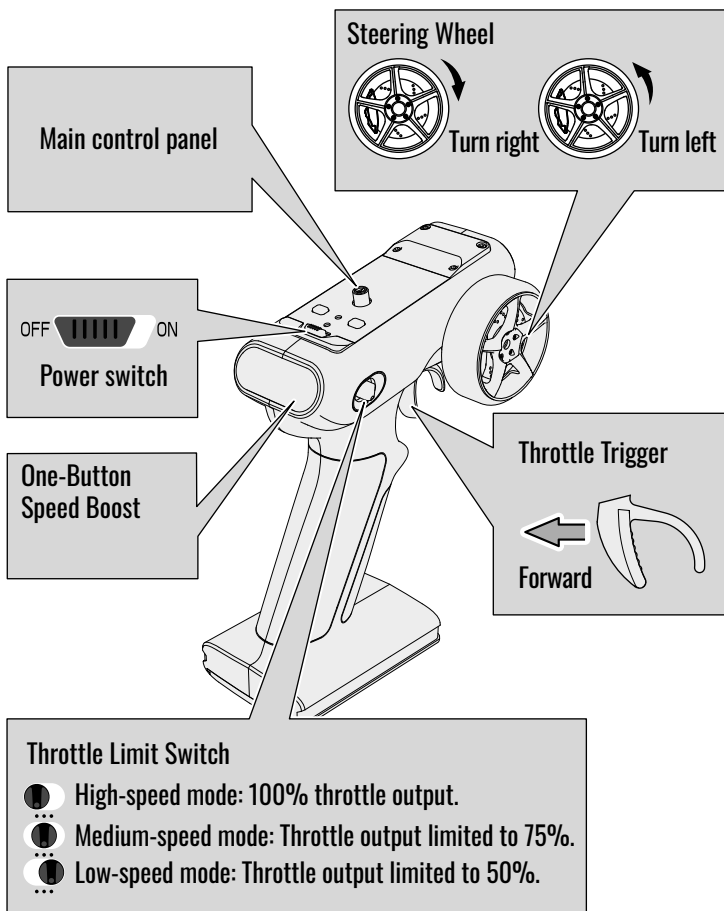

MAIN CONTROL PANEL FUNCTIONS

Steering trim



ST.TRIM
Tail trim



Turn the trim knob to the right if the boat steers to the left.



Turn the trim knob to the left if the boat steers to the right.

When the steering wheel is centred, use the steering trim knob if the boat does not travel in a straight line.

CAPSIZE RECOVERY

Press this button when the boat has capsized. The boat will automatically return to the upright position.



ST.TRIM

RX

TX

LIGHT CONTROL

Press this button to turn the front and rear lights on or off.


BOAT STATUS INDICATOR — GREEN

The green indicator light flashes when the boat battery is low. Recharge or replace the battery as soon as possible.

TRANSMITTER STATUS INDICATOR — RED

The red indicator flashes rapidly when the signal is weak or interrupted. It flashes slowly when the transmitter batteries are low. Resolve the signal issue or replace the batteries as soon as possible.

INSTALLING THE TRANSMITTER BATTERIES

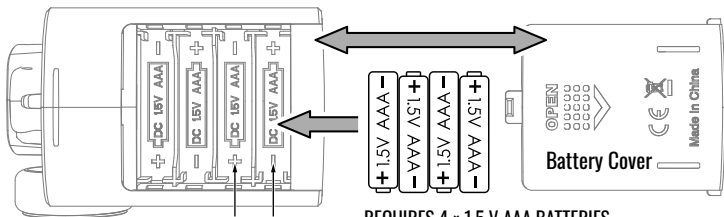

REQUIRES 4 × 1.5 V AAA BATTERIES
(NOT INCLUDED)

! IMPORTANT: OBSERVE THE CORRECT POLARITY

Open the battery cover on the bottom of the transmitter. Insert the batteries according to the polarity markings inside the battery compartment, then replace the battery cover.

PAIRING

1) Ensure that the throttle trigger and steering wheel are in the neutral position. Do not touch the throttle trigger while switching on the transmitter.




Do not touch the throttle trigger when turning on the power of the transmitter.

Please make sure the transmitter throttle trigger and Steering wheel to normal.



- 2) Switch on the transmitter. It will emit a beep, and the red indicator light will flash
- 3) Connect the boat battery. The transmitter will emit another beep when pairing is complete.
- 4) Securely close and lock the hatch cover.

Before long-distance operation, familiarise yourself with the boat's controls in a safe area close to shore.

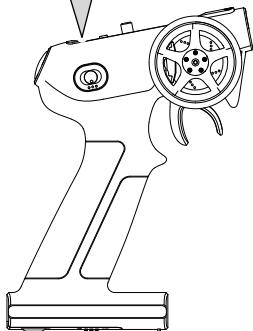


BEFORE OPERATING THE BOAT

1. Ensure that the silicone tube for the water-cooling system is not bent, pinched or blocked.
2. When the steering wheel is turned counterclockwise, the jet-pump rudder turns left. When the steering wheel is turned clockwise, the jet-pump rudder turns right.
3. Ensure that the boat cover is correctly fitted and securely locked.

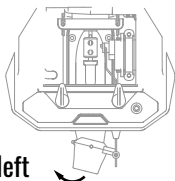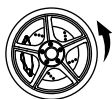


Turn left

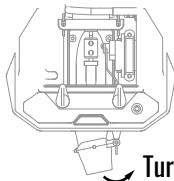

Turn right

THROTTLE AND STEERING

Throttle trigger

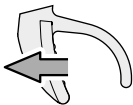


MOVE FORWARD

Pull the throttle trigger to move the boat forward.




TURN LEFT

Pull the throttle trigger and turn the steering wheel counterclockwise to turn left.

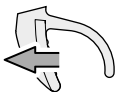


+

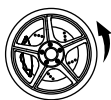


TURN RIGHT

Pull the throttle trigger and turn the steering wheel clockwise to turn right.

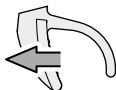


+



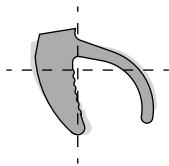

Pull the throttle trigger gently to move the boat forward slowly.

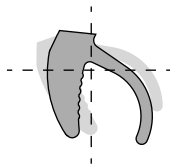


Pull the throttle trigger fully to move the boat forward at maximum speed.

WATER-COOLING SYSTEM

Water circulates through the cooling tube around the motor to help reduce the motor temperature during operation.



REPLACING THE STEERING SERVO

Disassembly: Switch off the boat before starting.

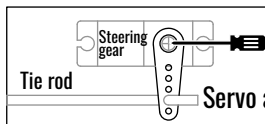

3) Remove the screw connecting the servo arm to the steering servo.

4) Separate the steering servo from the servo arm.

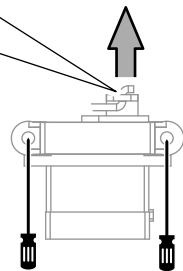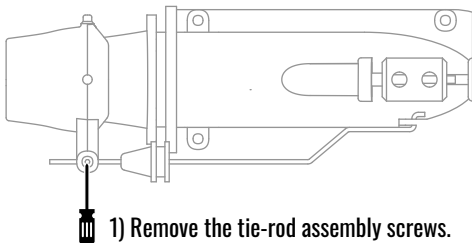

2) Remove the steering servo mounting screws, then take out the fixing parts.

Installation

Install the new steering servo by following the disassembly steps in reverse order.

Switch on the steering servo before fitting the servo arm to ensure it is centred.

Warning: Keep hands and loose objects away from the propeller when the boat is powered on.

SAFETY PRECAUTIONS

1. Switch on the transmitter before switching on the boat. After use, switch off the boat before switching off the transmitter.
2. Ensure that the battery and motor connectors are securely connected. Vibration during operation may loosen the connections.
3. Improper operation may damage the hull or jet-pump rudder.
4. Do not operate the boat near swimmers or in salt water, dirty water or areas with strong currents.
5. Remove the battery after use and keep the battery compartment clean and dry.

Troubleshooting Guide

Problem	Possible Solution
The transmitter indicator light is off.	1. Replace the transmitter batteries. 2. Ensure that the batteries are installed with the correct polarity. 3. Check that the battery cover and connections are secure.
Unable to pair the transmitter and boat.	1. Move away from possible sources of signal interference. 2. Repeat the pairing procedure according to the user manual. 3. Inspect the electronic components for damage.
The boat has low power or will not move forward.	1. Check the propeller for damage and replace it if necessary. 2. Recharge or replace the battery. 3. Disconnect and reconnect the power connector if the connection is loose. 4. Remove any debris from the jet-pump system.
The boat tilts to one side.	1. Check that the steering arm is correctly aligned. 2. Check that the jet-pump rudder is centred. 3. Replace the steering servo if it is damaged.

SPECIFICATIONS

Speed: Up to 20km/h

Remote Control Range: 80m

Play Time: Up to 10 Minutes

Charging Time: Up to 230 Minutes

Batteries:

Jet Ski: 7.4V Li-ion, 2000mA (Included)

Remote: 4 x AA (Not Included)

Dimensions: 355(L) x 127(W) x 111(H)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555



R-NZ