

14+
AGES

GT4332

1:12 SCALE TOYOTA® RC 4WD LAND CRUISER TOURING TRUCK



Instruction Manual



R-NZ

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 14 years and over.
- Adult supervision is required during operation.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not stick your fingers in the wheels of the truck while moving.
- Do not modify or attempt to repair the truck.
- Do not use the truck if any component is damaged or loose.
- Keep the truck away from water, heat or excessive moisture.

 
 
 
Operation & Care:

- Switch off the truck when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.

Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the truck while it is charging.
- Do not cover the truck or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.


Box Contents

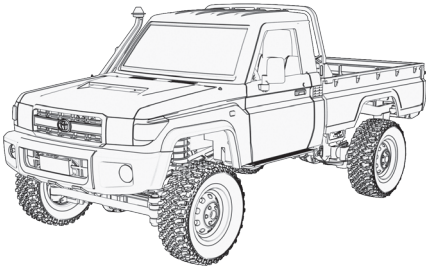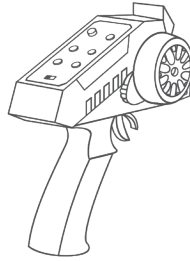


7.4V
BATTERY SET



 Battery Installation

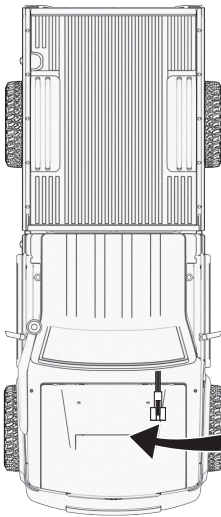


 7.4V
Battery Pack


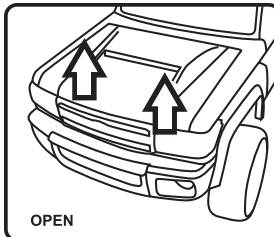


OPEN

 BATTERY CHARGING METHOD

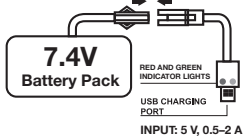

  Charging Status: The red light is on and the green light flashes.
Fully Charged: The red and green lights are on.

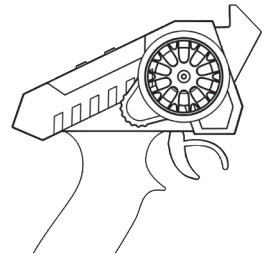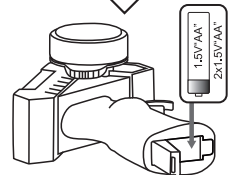

USE 2X1.5V"AA" BATTERIES
(NOT INCLUDED)

Remote Controller

 
Note: The binding and setup process has been completed before shipment. The following instructions are only for resetting.

Binding/Rebinding Process

1. Press and hold the BIND button, then turn on the transmitter. The transmitter will automatically search for the nearest receiver signal. The indicator will keep double-flashing during binding.
2. Turn on the vehicle receiver to complete the binding process.

Setup Mode


1. Press and hold the SETUP button, then turn on the transmitter. Release the SETUP button. The transmitter will enter setup mode and the indicator will keep double-flashing.

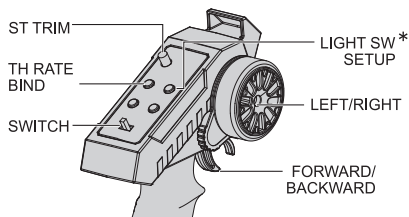

2. Press the left button (BIND button) to reverse the throttle. Press the right button (SETUP button) to reverse the steering.
3. Turn off the transmitter to save the settings.

*Tap for headlights. Press and hold for emergency flashers.

 Operation Guide

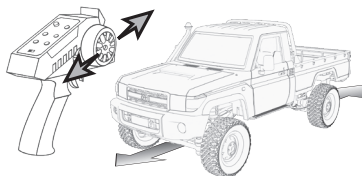

Pull the throttle trigger to move the car forward. Push the throttle trigger forward to reverse. When you pull the trigger halfway, the car will move forward slowly. When you pull it fully, the car will move forward at full speed.

 


Rotate the steering wheel clockwise to steer right. Rotate the steering wheel counterclockwise to steer left.

Accessory Installation



Safety Warnings

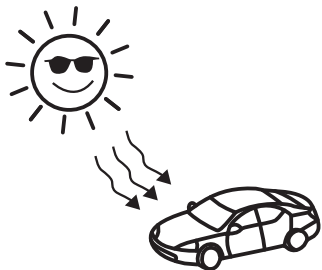

Keep the car away from fire and direct sunlight.
Disconnect the power when not in use.



Do not drive the car into water, as this may cause a short circuit.



Radio interference may affect the operation of your remote-controlled car. Interference may come from power lines, large buildings, radio waves, etc. Try to avoid these areas.

Troubleshooting

Vehicle does not work	Check that the transmitter and vehicle are turned on. Replace the batteries. Check the vehicle and electronics.
Vehicle runs slowly	Replace or recharge the battery pack. Check the throttle rate switch.
Vehicle does not drive straight	Adjust the ST TRIM. If the vehicle steers to the left, rotate the knob to the right, and vice versa.
Headlights flash quickly	Binding pending. Move the remote controller closer to the vehicle.
All lights are breathing	Battery voltage is low. Please replace or recharge the battery.

Specifications

Speed: Up to 10km/h
Frequency: 2.4GHz
Remote Control Range: Up to 50m
Play Time: Up to 40 Minutes
Charging Time: Up to 3 Hours
Batteries:
Truck: 7.4V Li-ion, 1200mA (Included)
Remote: 2 x AA (Not Included)
Dimensions: 358(L) x 160(W) x 160(H)mm

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555