

3+
AGES

GT4358

Bubble Gun with LED Lights



INSTRUCTION MANUAL

WARNINGS

- Do not aim the bubble gun directly into the eyes for face.
- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 3 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the bubble gun.
- Do not use the bubble gun if any component is damaged or loose.
- Keep the bubble gun away from heat or excessive moisture.

Operation & Storage:

- Do not submerge the bubble gun completely in water.
- Switch off bubble gun when not in use.
- Securely close the battery compartment before use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Only use suitable bubble liquid, do not use other chemicals such as detergent.

Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the bubble gun while it is charging.
- Do not cover the bubble gun or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not crush, puncture, bend, open, short-circuit or incinerate the battery.
- Do not expose the battery to water or other liquids.

- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

PACKAGE CONTENTS

1 x Bubble Gun	1 x Rechargeable 3.7V Li-ion Battery
2 x 60ml Bubble Solution	1 x USB Charging Cable
1 x Drip Tray	

CHARGING THE BATTERY

- Switch off the bubble gun before charging.
- Remove the rechargeable battery from the battery compartment.
- Connect the battery to the supplied USB charging cable.
- Connect the cable to a suitable USB power source.
- Disconnect the battery once charging is complete.
- Reinstall the battery securely before use.

PREPARING THE BUBBLE GUN

- Fill one of the supplied trays with bubble solution.
- Dip the bubble nozzle into the solution tray.
- Ensure the nozzle holes are evenly coated with bubble solution.
- Press the trigger to begin making bubbles.

HOW TO USE

1. Ensure the battery is charged and correctly installed.
2. Add bubble solution to the tray.
3. Dip the front bubble nozzle into the solution.
4. Press the trigger once to activate the bubble function and LED lights.
5. Release the trigger to stop operation.

SPECIFICATIONS

Play Time: Up to 20mins
Charge Time: Up to 4 Hours
Battery: 3.7V, Li-ion, 500mAh (Included)

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555