

GT4361

Electric Water Gun with LED Nozzle



INSTRUCTION MANUAL

SAFETY INFORMATION

Read these safety instructions carefully before using the product. Keep this manual for future reference.

WARNINGS

- Do not aim the water gun at the eyes or face.
- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 6 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the water gun.
- Do not use the water gun if any component is damaged or loose.
- Keep the water gun away from heat or excessive moisture.
- Do not submerge the water gun in water to prevent damage.

Operation & Care:

- Securely close the battery compartment before use.
- Store the product in a cool, dry location away from direct sunlight.
- Always use clean fresh water only when filling the water tank, do not add soap or detergent.
- Do not fill the water tank with hot water, salt water or flammable liquids.
- Keep water away from the USB charging port.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Rinse the water tank with clean water and allow it to dry before storage.
- Always empty the water tank and allow it to dry before storage.

Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.

- Do not operate the water gun while it is charging.
- Do not cover the water gun or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.

PACKAGE CONTENTS

- 1 × Electric Water Gun
- 1 × Water Tank
- 1 × USB-C Charging Cable

CHARGING THE BATTERIES

1. Ensure the water gun is switched off and dry before charging.
2. Connect the USB-C charging cable to the charging port.
3. Connect the other end to a suitable USB power source.
4. Charge for up to 3 hours.
5. Disconnect the cable once charging is complete.

Note: It is recommended to fully charge the water gun before first use.

FILLING THE WATER TANK

1. Turn the water tank anticlockwise to remove it from the water gun.
2. Fill the tank with clean, fresh water only. Do not overfill.
3. Screw the water tank clockwise into the opening at the bottom of the water gun until secure.

Note: Only fill the tank with clean, fresh water as it may damage the water gun.

HOW TO USE

1. Fill and attach the water tank.
2. Press and hold the trigger to activate the water gun, the LED nozzle will begin lighting up.
3. Release the trigger to stop operation.

SPECIFICATIONS

Water Capacity: 330 mL
Play Time: Up to 40 Minutes
Charging Time: Up to 3 Hours
Battery: 3.7 V Li-ion, 1200 mAh

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555