



Deluxe Single Swag Tent

USER MANUAL

Please read this manual carefully before installation, and retain it for future reference.

SWAG INSTRUCTIONS

HOW TO ASSEMBLE END HOOP POLES:

- Clip from the top of the swag down each side alternately until you reach the bottom.
DO NOT clip from right to left or left to right.
- MUST be done from the top down.

SEASONING YOUR NEW SWAG

- Wet the canvas thoroughly then dry completely-repeat 3 times.
- This process can take up to 3-4 days to complete as canvas must be completely dry each time.

HOW TO DISASSEMBLE THE END HOOP POLES

- Unclip from the bottom of the swag up each side alternatively until you reach the top.
DO NOT unclip from left to right or right to left.
- MUST be done from the bottom up.

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

EXCLUSIONS:

This warranty does not cover defects, failure or damage caused by incorrect installation, intentional damage, misuse or abuse. It is recommended that the installation should be performed by suitably qualified technicians or the warranty will be voided. For further clarity, this warranty is also void if the swag tent:

- is repaired, altered or modified carried out by anyone other than ROVIN, or without ROVIN's authorization,
- is damaged by mould and mildew as the tent is not properly dried prior to closing,
- is damaged by extreme weather (e.g. storm, hail or strong wind), extreme temperature, accidents, negligence, daily wear and tear, incorrect setup, or failure to check the condition of the tent before each use,
- is damaged by UV degradation or acid rain to the tent/awning and its components,
- is damaged from improper storage, or a failure to provide routine maintenance,
- is used on permanent sites or commercial displays.

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects. To make a claim please ensure you retain your receipt and contact the place of purchase.



Distributed by:

Electus Distribution Pty Ltd

46 Eastern Creek Dr,

Eastern Creek NSW 2766 Australia

Ph 1300 738 555

www.electusdistribution.com.au