



Deluxe Double Swag Tent

USER MANUAL

Please read this manual carefully before installation, and retain it for future reference.

DELUXE DOUBLE SWAG TENT SETUP

- Unclip 2 straps around swag
- Roll out swag
- Setup both swag poles, the same swag pole is used for both ends
- Build each curved swag pole by joining them end to end. Thread the curve swag pole through the canvas sleeve at the top of the swag.
- Clip swag poles into locating pins at the external corners of the swag
- Clip plastic retaining clips onto swag poles
- Push one end of centre adjustable pole into top centre hole at one end of swag
- Open the locking tab and then expand centre pole whilst pushing into opposite top centre hole.
- Close locking tab on centre pole
- Peg out both swag ends and tension to suit
- Outer canvas door can be rolled up and secured with retaining loops for greater air flow through the swag

The mattress is compressed when rolled up. Allow at least 6 Hours for the mattress to expand fully.

PLEASE ALLOW 24 HOURS FOR YOUR MATTRESS TO FULLY EXPAND AFTER OPENING FOR THE FIRST TIME.

THIS GUIDE DETAILS STEPS FOR SEASONING YOUR DELUXE DOUBLE SWAG TENT

PRIOR TO FIRST USE

- Set up the swag as per the product manual, without the mattress inside.
- Pull the mattress out, lay it out flat external of the swag and give it a quick shake to allow it to fill better with air.
- The canvas Deluxe Double Swag Tent are made from is a poly-cotton blend that gives a great mixture of durability, strength, flexibility and water resistance.
- To increase the water resistance of the canvas, the cotton fibres within the canvas blend need to swell. This swelling allows the fabric to expand to fill any small gaps in the canvas, as well as sealing any needle holes from manufacturing.
- This process will happen over time during use in wet weather. It's preferable to season your canvas prior to use so that your swag is water resistant and you're not trying to season canvas when actually in use in a wet environment risking getting wet yourself.
- Then with the windows and zips closed, thoroughly wet all the external surface area of your swag with a hose or bucket.
- Once all the canvas is wet, allow the swag to dry naturally in direct sun by not using external heating or drying equipment.
- Repeat this process in full at least 3 times to ensure sure all sections of the canvas have been treated and considered seasoned. Your swag canvas is now water resistant and ready for use.
- Working through the above steps means your Deluxe Double Swag Tent is better able to cope with harsh weather events

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

EXCLUSIONS:

This warranty does not cover defects, failure or damage caused by incorrect installation, intentional damage, misuse or abuse. It is recommended that the installation should be performed by suitably qualified technicians or the warranty will be voided. For further clarity, this warranty is also void if the swag tent:

- is repaired, altered or modified carried out by anyone other than ROVIN, or without ROVIN's authorization,
- is damaged by mould and mildew as the tent is not properly dried prior to closing,
- is damaged by extreme weather (e.g. storm, hail or strong wind), extreme temperature, accidents, negligence, daily wear and tear, incorrect setup, or failure to check the condition of the tent before each use,
- is damaged by UV degradation or acid rain to the tent/awning and its components,
- is damaged from improper storage, or a failure to provide routine maintenance,
- is used on permanent sites or commercial displays.

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects. To make a claim please ensure you retain your receipt and contact the place of purchase.



Distributed by:

Electus Distribution Pty Ltd

46 Eastern Creek Dr,

Eastern Creek NSW 2766 Australia

Ph 1300 738 555

www.electusdistribution.com.au