



**RBG042**

# **Beach Cabana**



**INSTRUCTION MANUAL**

## GENERAL INFORMATION & SAFETY INSTRUCTIONS

Before using the gazebo for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the gazebo by reading through the instructions first.

- DO NOT set up near open flame.
- DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the gazebo.
- Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your gazebo.
- Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- Gazebo must be securely pegged or weighed down to the ground using all the peg points provided.
- Keep children away from the set up area.
- When removing the pegs from the ground, never pull on the gazebo to remove. This may cause damage to either property or persons. Always pull on the peg itself.

This gazebo is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

**WARNING: The manufacturer is not responsible for any potential injury from misuse**

## SETUP INSTRUCTIONS




**STEP 1**  
Remove the frame from the carry bag and stand it up so the feet are on the ground.



**STEP 2**  
Pull opposite corners away from each other to expand gazebo frame.



**STEP 3**  
Slide each bracket up until all four are locked in place.

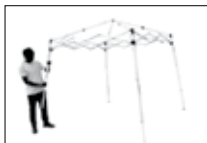

**STEP 4**  
Extend gazebo legs to desired height.



**STEP 5**  
Drape the canopy over the frame and fasten the canopy to the frame.



**STEP 6**  
Wrap wall straps around legs below push-pins to keep wall tight.


## PACK DOWN INSTRUCTIONS




**STEP 1**  
Push the release button located at the top of each corner. This will allow the gazebo frame to release.



**STEP 2**  
Detach canopy from frame and fold it neatly, so it will easily fit into carry bag.

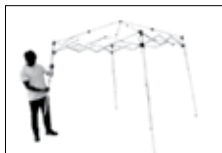

**STEP 3**  
Release and push all gazebo legs down to their lowest position.

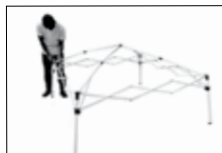

**STEP 4**  
With all pull-pins released, pick up and walk one corner of canopy towards the opposite corner.



**STEP 5**  
Fully compress frame so it will fit easily into the bag

**STEP 6**  
Slide the frame into the carry bag. The folded canopy will now fit in between the four legs.

## CARE & MAINTENANCE

The following are some helpful tips on how to clean and properly store your gazebo.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.
- Never store the gazebo wet. If gazebo is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555