

**2 Litre EcoSpin
Portable Washing Machine
RCC422
User Manual**

《 Important Safety Precautions 》


★ Please read this manual thoroughly and carefully and follow all instructions and safety guidelines before using. Incorrect operation can result in serious damage or injury.



ATTENTION

1. Be careful not to add water higher than the Max Level listed here. If water is too high, the fast speed of the handle will cause to overflow.
2. Do not open the plug of the drain hose when washing.
3. The suction cups are designed to hold the machine in place during working. Do not pull up the product when you want to move it, should level shift it.
4. For storage, pull the handle up slightly and then fold it down over the lid.
5. Never try to move the product by grabbing the handle.
6. Never try to pull up the handle when you rotate the handle
7. Never try to open the lid when it is working, especially when it is spinning.
8. Make sure the product is level when spinning to avoid damaging the feet.
9. Do not use boiling water.
10. Do not store the machine with water in it.
11. Do not overload the machine.
12. Keep machine and all laundry detergents away from children and pets.
13. This machine is not intended for use by persons(including children)who are weak in physical fitness, slow in response, or mentally disabled, unless they are directed or assisted by the person responsible for their safety.

《 Product Descriptions 》

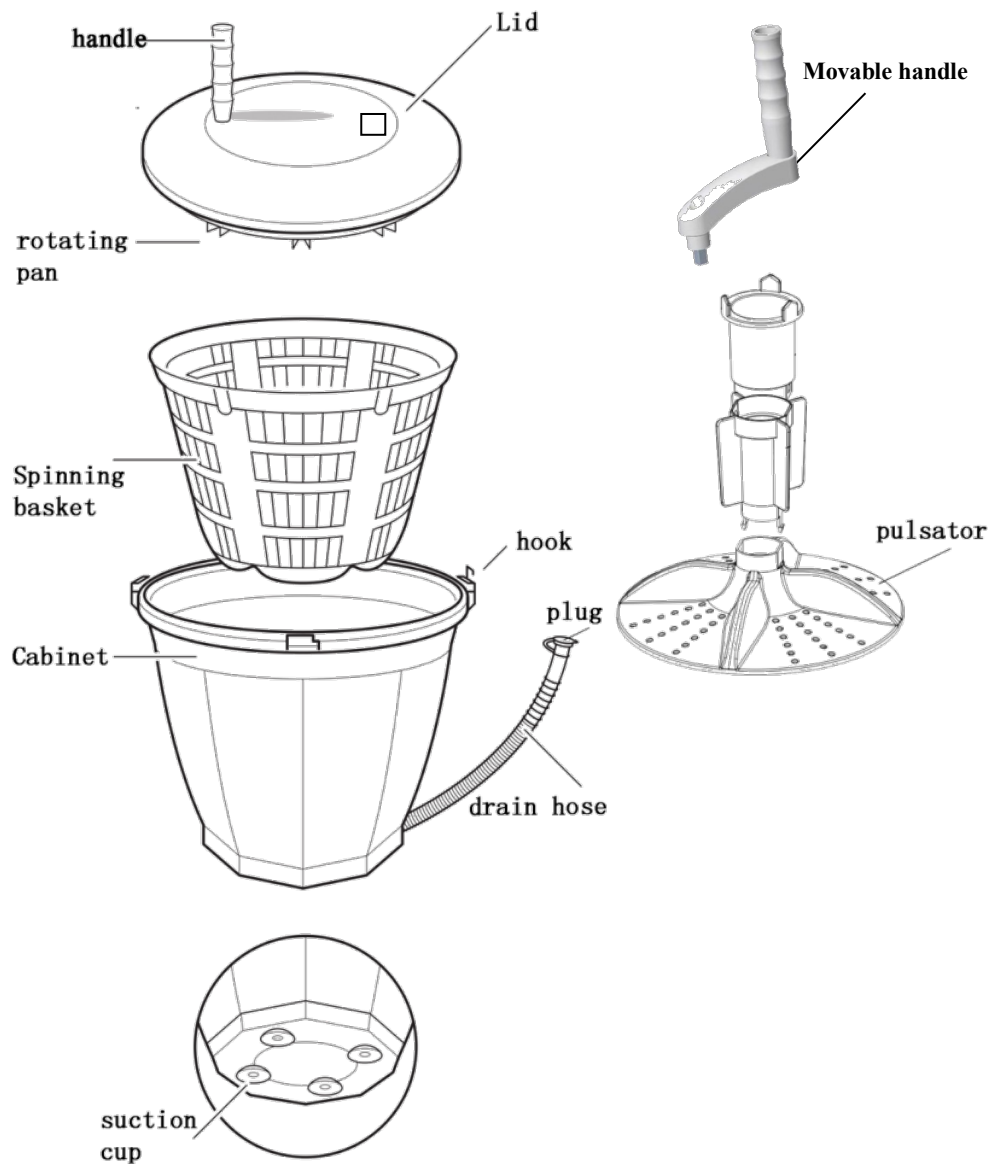


《 Product Specification 》

| | |
|--------------------|---------------|
| Product Size | 340x340x343mm |
| Product Weight | About 2.0kgs |
| Wash/Spin Capacity | About 2.0kgs |


《 Using Guide 》

★ The RCC422 is an eco-friendly, hand-powered wash-spin cycle for washing garments. It is suited to wash and spin delicate articles, such as bras, t-shirts, underwear, socks, face towels and more.


Open the lid as the “Open” sticker list on side Of the lid

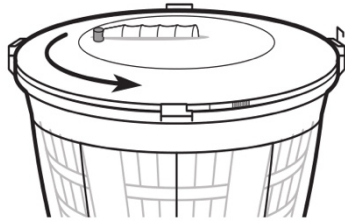

Take out spinning basket and inset to connect the whole pulsator. Inset whole pulsator into the axle on bottom of the cabinet.


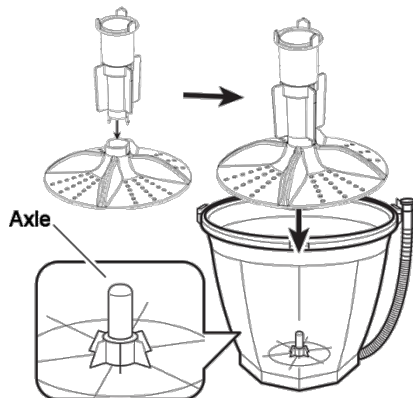


Add the required amount of water and detergent according to the washing chart.

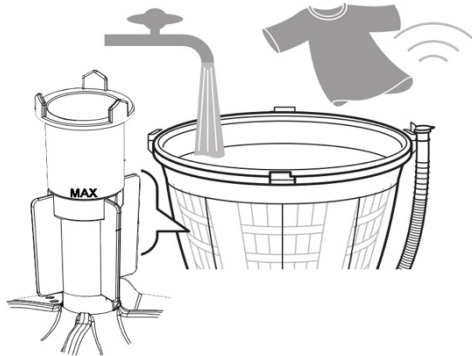

Attention: Do not add water higher than The Max Level listed here.

Close the Lid and lock the lid

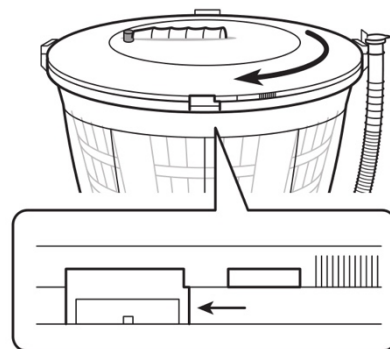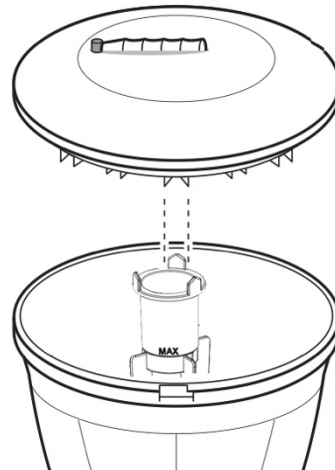


Washing Chart:


| Load(pcs) | Detergent | Wash Time |
|-----------|--------------|-------------|
| 1-2 | 1tablespoon | 1 minute |
| 2-3 | 2tablespoons | 1.5 minutes |
| 3-4 | 3tablespoons | 2 minutes |

Washing

Place the RCC422 on the edge of a flat, level sink or tub. Pull up the handle.

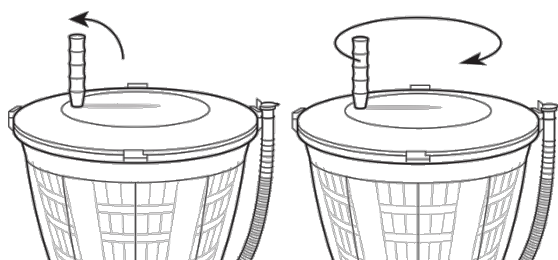

Or insert movable handle to turn easily.

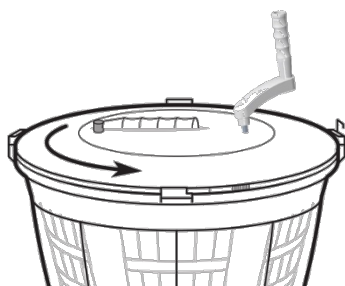

Begin turning the handle to wash, using added power at first. Turn clockwise one round and stop a while then counter-clockwise one round.




Do not turn quickly when washing to avoid overflow!



Never try to pull up the handle when turning the handle !

Drain water

Down the drain hose, open plug to drain water. Remember to insert plug when you add water.

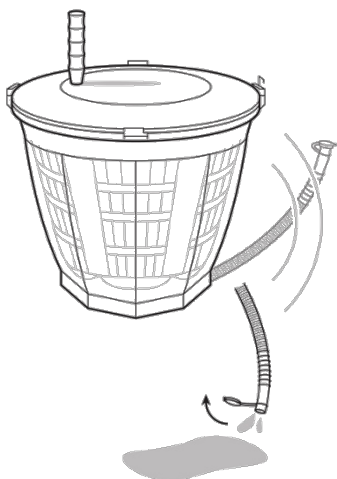

Rinsing


Turn the handle a few times to spin the laundry and drain any excess water.

Leave the laundry in the machine and refill it with clean water according the amount listed in the washing guide above.

Close the lid and rotate the handle for about 30 seconds. Drain water. If need further rinsing, fill with clean water and repeat.

Spin Dryer

Take out whole pulsator and put inside spinning basket. Load wet clothes into it. Close lid and lock it.

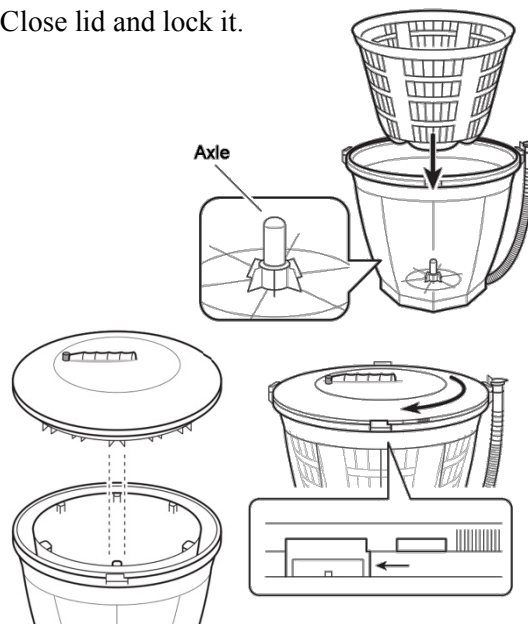

Make sure to down drain hose and open plug.

Rotate the handle in one direction. The faster you rotate it the drier the clothing will get. For best results, hold the machine using your other hand so you can rotate quickly. When spinning, you will be rotating quickly so it's possible that the machine will shake slightly. This is normal. If it is shaking too much, it might mean the clothing isn't distributed properly. In this case, just let go of the handle until it stops working. Open the lid to balance clothes inside, then close the lid and begin to spin again.

《 Maintenance 》



ATTENTION: Do not clean the machine with organic solvent!

Clean outside

If have to clean outside of the machine, do it with soft mop and neutral detergent. And dry outside after cleaning.




Clean inside

The one of biggest advantage of the product is that We can clean the whole pulsator, spinning basket and inside of cabinet.


Clean pulsator

Take out the pulsator directly and clean.
If you want to further clean, you can pull out with a little power to separate two parts.

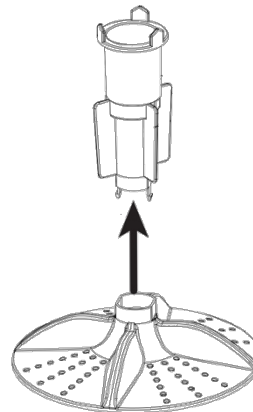

Clean spinning basket

Take out the basket directly and clean.

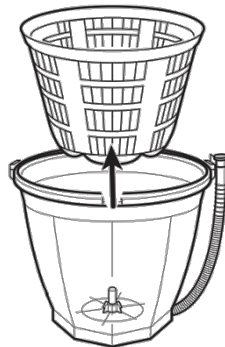

Clean cabinet

Clean cabinet after take out plusator and spinning basket.



ATTENTION:

Make sure to dry all parts to avoid producing peculiar no use!

smell if long time

Distributed by: TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere, NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

Made in China