

Pop Up Gazebo



INSTRUCTION MANUAL

PRECAUTIONS

- Use warm water with a mild detergent and a soft, damp cleaning cloth on the surface of the product, as well for removing any stain or mold. Dry with a clean cloth.
- Never use solvents, scrapers, abrasives, bleach, acids, strong detergents or aggressive chemical cleaning preparations, such as cleaning solutions for this product.
- Do not use high pressure washer to clean this product.
- For information about maintaining the fabrics look at the accompanying label.

Fire and Safety Precautions

- Always ensure the gazebo is firmly secured to the ground before use.
- Always use external tie-downs and stakes to secure your gazebo.
- This gazebo is designed for temporary use only and not as a permanent structure.
- Never leave the gazebo unattended when raining or during windy conditions.
- Do not allow water to collect on the canopy roof, as this may cause the structure to callapse.

WARNINGS

- Make sure the connections are secure.
- Always use a stable, level surface.
- Do not stand up on the product, do not jump and climb on product.
- Do not allow children to play on the product.
- This product is intended for domestic use only.
- This Gazebo is not fire proof. Keep away from naked flames at all times.
- Do not smoke in or near the gazebo.
- Do not place hot appliances in or around the gazebo.
- Do not use open flame heaters in your gazebo.
- Fabric will melt when contact is made with hot surfaces.
- Injury or death may result from fire if tent fabric is exposed to open flame. Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent.
- The UPF50+ rating is for the canopy material only. The amount of sun protection received will vary depending on the correct positioning of the gazebo. Please note the suggested positioning. Reflective rays can also cause sun burn. Sunscreen should be worn at all times.

APPROPRIATE USE

- The pavilion that you have bought main purpose is to protect agains sunshine
- The pavilion should not be used as a protection against wind and rain.
- Please assemble and use this product only after reading carefully this instruction.
- Failure to follow these instructions we can not guarantee the proper functioning of the pavilion.
- Before using the product make sure that the pavilion has been completely and correctly assembled.
- Keep children and pets away during the installation.
- Store components so that they are not accessible to children.
- Never built a pavilion indoors. The pavilion is designed to be used only outdoors.
- Do not place the pavilion on a soft, muddy or sandy soil as there not be enough grip.
- Place the pavilion in a place where it can be protected from the wind.
- The pavilion is intended for temporary use only.
- Do not put on weights on top of the pavilion.
- Regularly check the roof to prevent accumulation of water on its surface!
- Do not use the pavilion under conditions of strong wind or rain! Under wind power from fourth grade on the scale of Beaufort and in case of heavy rain or snow, you must dismantle the pavilion. Do not stay in such weather conditions in the pavilion. Accommodated in more suitable premises.

Note: Please note that this pavilion is not 100% waterproof, so when raining can occur water to pass through the material from which it is made, and through the stiches too. This pavilion is designed primarily as sun protection, not for protection from wind and rain.

AT THE BEGINNING OF THE SEASON:

- Make sure that all components and fixings at this product are secure.
- Do not use if you have concerns about the integrity of product.


AT THE END OF THE SEASON:

- This product should be stored indoors during prolonged periods of unfavorable weather conditions (wet or cold weather), and also during the winter (ideally case will be under the garden shed or in the garage).
- Always clean and dry the product thoroughly before storing.


ASSEMBLY INSTRUCTIONS

1 Fold out Gazebo.

2 Lay out Gazebo walls.

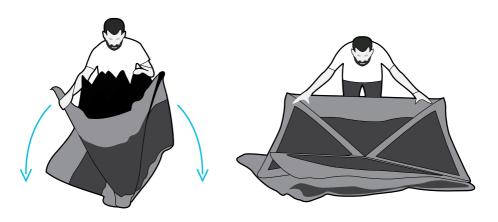


3 Pop out Gazebo walls x 5. (Do not pop up top yet!)

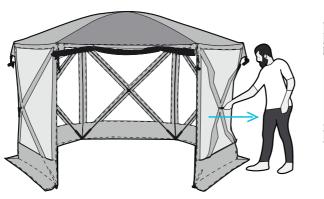





4 Insert the poles into the roof and door.



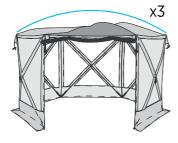

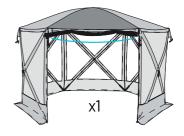

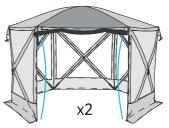

5 Pop up the centre firmly.



6 Peg down the Gazebo at the base of each corner. Use the guy ropes and pegs to secure firmly.



CARE INSTRUCTIONS

- Frame: Wipe down with fresh water after use.
- Canopy: Use a sponge with fresh water and mild detergent.
- Allow to dry thoroughly before storing.
- Do not store when wet.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766 Ph. 1300 738 555