




TCA588

Portable Fire Pit Rotating Grill

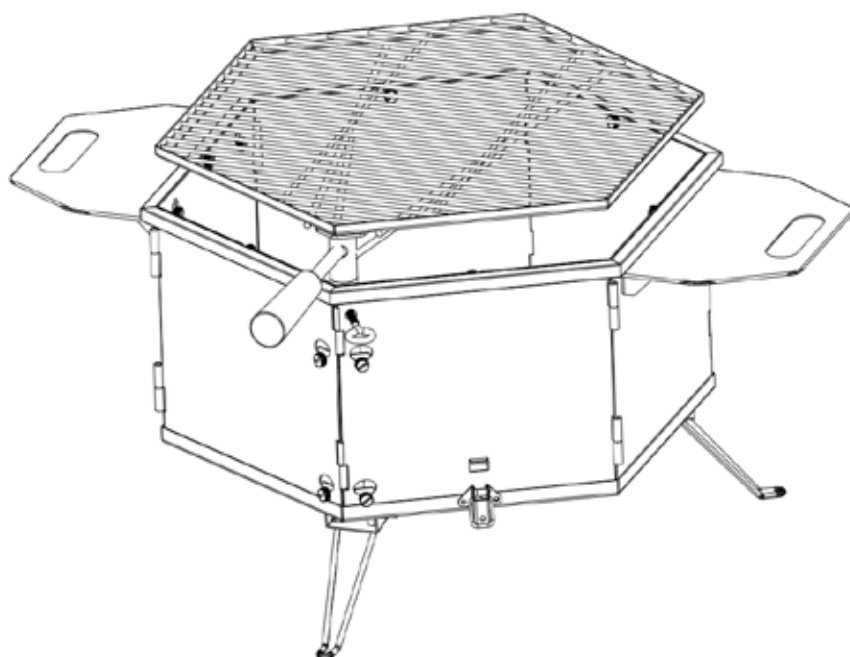


INSTRUCTION MANUAL

BOX CONTENTS



Base x 1

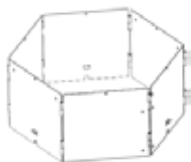

Frame x 1



Handle x 2



Drive Pipe x 1



Top Strap x 1



Grill Base x 1



Grill Handle x 1



Grill Mesh x 1



Screw x 14



Fixing Bolt x 1


Ground Protecting Mat x1

Carry case x 1


ATTENTION

- Please ensure proper assembly and no damage before use.
- Please install on a flat ground to avoid damage or affect normal use.
- Please wearing gloves when assembling, using and disassembling for safe use.
- Please pay attention to fire prevention work when using.
- Please do not hit the grill with hammer or other hard objects to avoid damage and affect the use of the grill.
- Please do not use water to cool suddenly when there will be a normal phenomenon like slight deformation after high temperature.
- For first use there will be a little smoke smell, which is normal regarding heat resisting coated. It'll be faded in minutes.
- For safety, please use it outside


USAGE INSTRUCTIONS

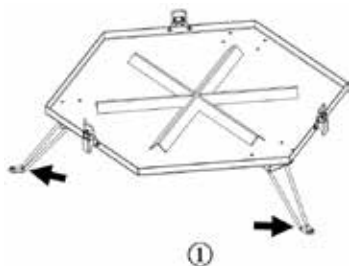


1. Pull out the three supporting feet of the base

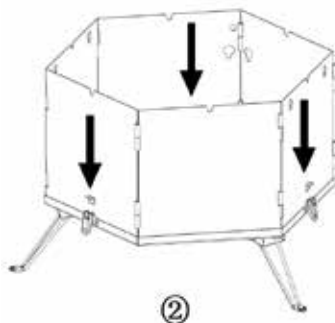


2. Place the frame vertically on the 5 edges of the base, facing down the clip-on and make the clip-on are in the same symmetrical position with the 3 pins of the base, close the clip-on with pins then finish the fixed part.

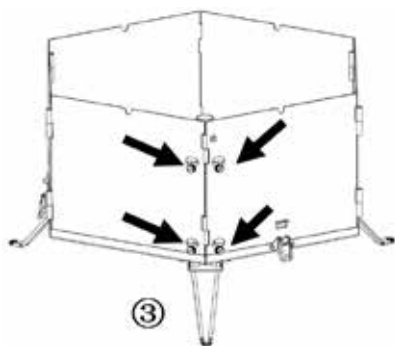


3. Fix the drive pipe on the inside of the frame in the direction of the arrow and make 4pcs screw fastening

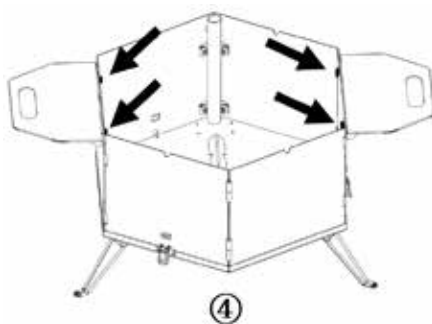

4. When installing the handle, first fix the screw in the screw hole of the handle, then adjust the hand screw to a suitable degree of tightness, and fix it

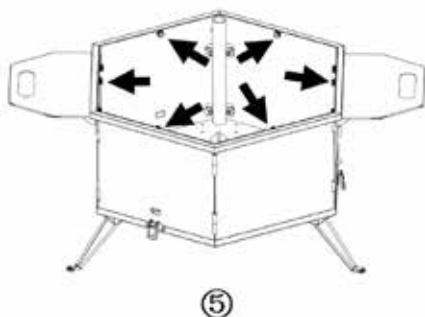

5. Install the top frame and align the screw hole of top frame with the screw hole in the frame of stove body. After the right installation, fix the top frame and frame of the stove body with 6 screws respectively

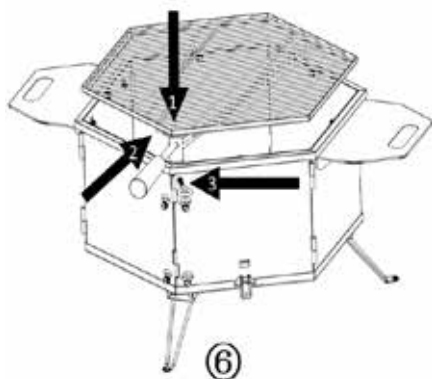

6. According to the three steps indicated in Figure 6, Step 1, Place the grill mesh and grill mesh base, and install the base in the drive pipe for rotation. Step 2, put the handle into the base of the grill mesh and tighten it. Step 3, screw the fixing bolt into the drive pipe to fix the rotating grill mesh.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555