



**ROVIN**

**TFI406**

# **Beach Wagon**



**INSTRUCTION MANUAL**

## CAUTIONS

- This product is intended for transporting goods only. It is strictly prohibited to carry people. Do not use animals or vehicles to tow it.
- Do not step on or jump on the bottom plate of the folding wagon.
- Do not load objects that exceed the load capacity.
- Children should not be allowed to operate it.
- Prolonged exposure to weather extremes can cause fabric colour and quality degradation.
- When using this product, please stay away from fire sources, high temperatures, pools, power supplies and other dangerous places.

## MAINTENANCE

- When cleaning the fabric pocket, please use water temperature below 30 degrees Celsius, and do not bleach.
- When cleaning the frame, only use neutral detergents and warm water. Do not use corrosive cleaners.
- Please check your cart before and after use, tighten or repair loose or worn parts, clean off dirt and keep it clean.

## OPERATION INSTRUCTIONS

### Unfolding the wagon

1. Remove the velcro tape from the carry handle.
2. Stretch the outer wagon frame to unfold it.
3. Hang the cloth ears to the frame on both sides.
4. Press the button to pull the handle to the proper length and stretch it from the plastic clip on the frame.



### Folding the wagon

1. Depress the handle and put it back to the plastic clip.
2. Pull up the lifting handle in the center of the basket in an upward direction.
3. Push the wagon frame inward and fold the entire wagon. Secure it with the velcro strap at the carrying handle.



## **WARRANTY INFORMATION**

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555