

Round Camping Light with USB Powerbank



Instruction Manual


WARNINGS & SAFETY INFORMATION

Please read through these operating instructions carefully and thoroughly. These instructions form part of the product and contain important start-up and handling information. Always observe all the safety instructions. Please keep these instructions in a safe place, and pass them on, if necessary, to third parties.

Warning

- Do not install in a humid environment, under direct sunlight or near gas outlets.
- When the battery runs flat, ensure you charge the product back up to maximise the lifetime of the unit.
- Please do not attempt to open the product as this will void warranty.
- Charge unit only using a suitable 5V USB outlet.
- This product has an inbuilt battery, it is strongly advised not to disassemble, puncture or place into fire. If there are signs of swelling, do not continue to use the product.
- Once the LED Light source reaches its end of life it can not be replaced.
- Please keep this product out of reach of children and do not use this product in high temperature environments.

FUNCTIONS

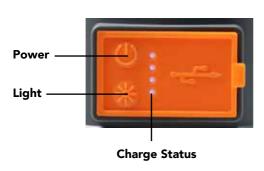



USB Power Bank Output

Power Button

Short Press

- 1st Press turn ON, 100% Brightness
- 2nd Press 75%
- 3rd Press 50%
- 4th Press 25%
- 5th Press RED & BLUE Flash
- 6th Press turn OFF

Long Press

• While the light is ON, long press to adjust the dimming settings. After the desired brightness is set if you press any buttons after this the settings will be reset back to the beginning.

Light Button

Short press to turn ON flashlight, short press again to turn OFF.

Charge Status

This unit has 4 Blue LED indicator lights which display the charge status. 4 Blue LEDs on mean the battery is 100% charged.

USB Charging

The power bank function is able to provide 5V 2A output provided the device is compatible.

SPECIFICATIONS

Input: USB-C (5V/1A)

Lumen: 1200 Charge Time: 9hrs

Run Time: Up to 10hrs Battery: 18,000mAh

Product size: 136 x 136 x 168mm

Weight: 777g

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555